

LED DOUBLE RING FLUSHMOUNT



Oncall LED

INSTALLATION INSTRUCTIONS

Safety Information

- ☒ Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box.
- ☒ Consult a qualified electrician if you have any electrical questions or need to replace the driver.

⚠ WARNING: Disconnect the power prior to removing or installing a light fixture.

Pre-Installation

PLANNING THE INSTALLATION

Read all instructions before assembly and installation. Before starting installation of the fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box. To avoid damaging this product, assemble it on a soft, non-abrasive surface such as carpet or cardboard.

📄 NOTE: Keep your receipt and these instructions for Proof of Purchase.

TOOLS REQUIRED



Phillips
Screwdriver



Wire
Cutter



Wire
Stripper



Ladder



Electrical
Tape



Safety
Goggles

HARDWARE INCLUDED



AA




BB

Part	Description	Quantity
AA	Wire Nut	3
BB	Mounting Screw	2

Pre-Installation (continued)

PACKAGE CONTENTS


Part	Description	Quantity
A	Fixture Pan	1
B	Lamp Shade	1
C	Frame	1
D	Thumb Nut	3

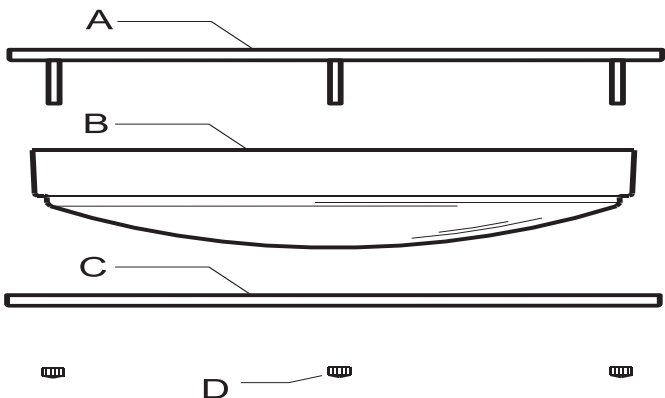

Installation

1 Mounting the hardware

- ☒ Thread the mounting screws (BB) into the outlet box so that they extend approximately $\frac{1}{2}$ " below the ceiling.

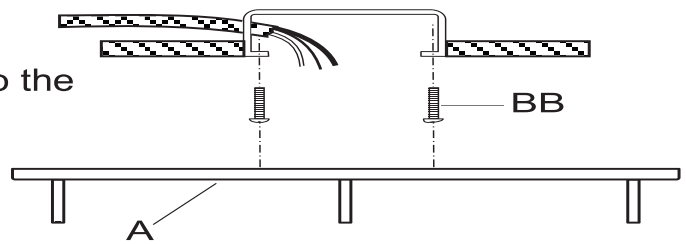


2 Connecting the wires



NOTE: If you have electrical questions consult your local electrical code for approved grounding methods.



- ☒ Pull the power supply wires out from the outlet box.
- ☒ Connect the black supply wire to the black fixture wire using wire nuts (AA).
- ☒ Connect the white supply wire to the white fixture wire using wire nuts (AA).
- ☒ Connect the fixture ground wire and the supply ground wire together using a wire nut (AA).
- ☒ Wrap all wire connections with electrical tape for a more secure connection.

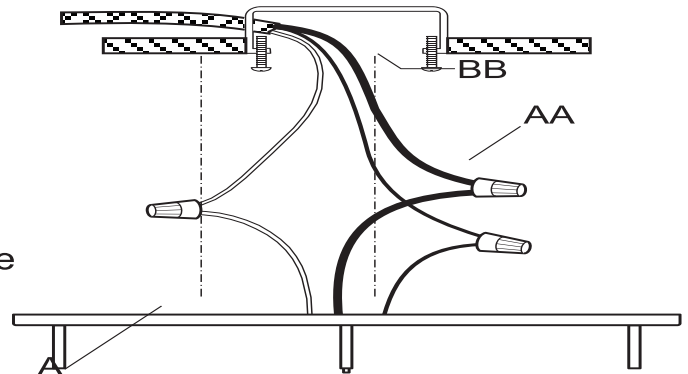

Installation (continued)


3 Securing the fixture pan

- ☒ Carefully tuck all the wires and wire connections into the outlet box.
- ☒ Place the fixture pan (A) over the outlet box and feed the mounting screws (BB) through the keyhole slots.
- ☒ Rotate the fixture pan (A) so that the mounting screws (BB) slide into the narrow slots of the keyhole slots.
- ☒ Tighten the mounting screws (BB) so that the fixture pan (A) is secured flush against the ceiling.

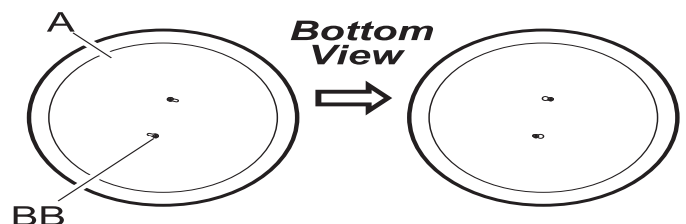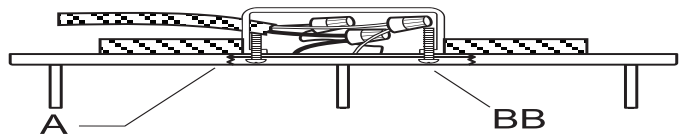

4 Assembling the fixture

- ☒ Secure the acrylic shade (B) and the frame (C) to the fixture pan (A) using the thumb nuts (DD).

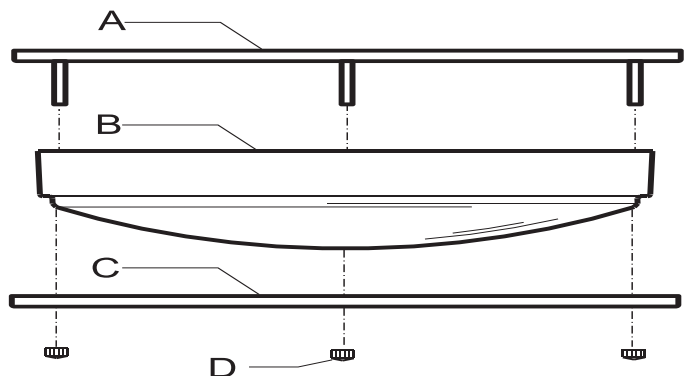

Operation


- ☒ Turn on power at the circuit breaker or fuse box.
- ☒ Turn the light switch on to activate the fixture.

Dimming

Although this product is compatible with most common residential type dimmers, dimming performance depends on dimmer, dimmer setting (for dimmers with brightness range adjustments), wiring method, and the number of LED modules. For best results, set dimmer position at maximum before adjusting to a lower light level.

TRIAC Dimmers and Connections


Brand	Model #	Max Luminaires
Lutron	DVCL-153P, CTCL-153P, TGCL-153P	5
	MACL-153M, PD-6WCL,	5
Leviton	IPL06-10, 6672-IL, 6674-P0	5

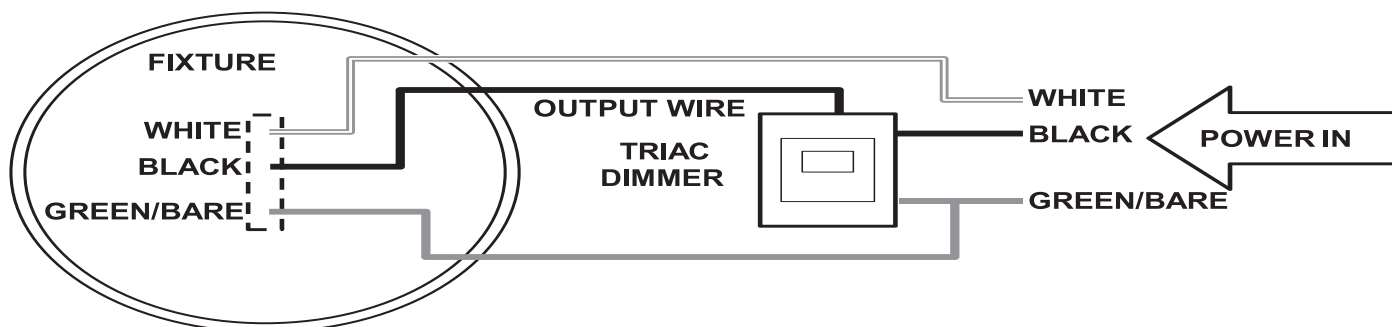

Adjust the light temperature

Integrated Switch

Before Installation, Using the Switch Select from Soft White, Warm White, Bright White, Day Light or Cool White

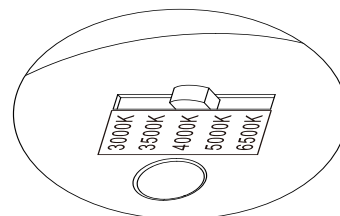

FCC Notice

NOTICE: This device has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference can be determined by turning the equipment off and on, the user is encouraged to try to correct the interface by one or more of the following measures:

- ☒ Reorient or relocate the receiving antenna.
- ☒ Increase the separation between the device and receiver.
- ☒ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☒ Consult the dealer or an experienced radio/TV technician for help.

Warranty

We offers a warranty of 5 years from the date of purchase that covers repair or replacement of defective parts of the housing, optics, and electronics